

FACILITY DRINKING WATER SAFETY MONITOR

Model Series - NexBeta-ABG SERIES

NexBeta-ABG ~ NexBeta-ABG-9 ~ NexBeta-ABG-9TT

PROTECT VULNERABLE –
HOSPITALS – SCHOOLS – GOVERNMENT FACILITIES

FEATURES:

- DETECTS ALPHA, BETA AND GAMMA RADIATION
 - THREE MODELS: **NexBeta-ABG (User's PC); NexBeta-ABG-9 (All-in One); NexBeta-ABG-9TT (All-in-One / Test & Treat)**
Comparison Chart last page.
- **NexBeta-ABG-9TT – TEST & TREAT**
 - BIOLOGICAL SENSORS -
 - OXIDATION REDUCTION POTENTIAL (ORP)
 - TOTAL ORGANIC CARBON (TOC)
 - TREATMENT OF ISOTOPES & BIOLOGICAL CONTAMINATION
- ON-BOARD COMPUTER - **NexBeta-ABG-9 & NexBeta-ABG-9TT**
- **NexBeta-ABG SERIES**
 - PORTABLE OR INSTALLED
 - REAL TIME CONTINUOUS WATER MONITOR
 - HIGH SENSITIVITY
 - NO REAGENT TANKS TO FILL; NO WASTE STREAM
 - EASY CALIBRATION
 - PREVENT ACUTE HEALTH EFFECTS; REDUCE RISK OF CHRONIC EXPOSURE
 - MEASURES AT OR BELOW EPA/DHS **PAG LEVELS**

Protective Action Guideline Levels and Military Drinking Water Limits

NOTE:

- **TA MAKES THE WORLD'S ONLY PAG-LEVEL WATER MONITORS**
- ALSO DETECTS SOME ISOTOPES DOWN TO LOWEST EPA LEVELS



**NexBeta-ABG & LAM-10-D
ELECTRONICS ASSEMBLY**



**NexBeta-ABG 9 &
NexBeta-ABG-9TT ELECTRONICS**

APPLICATION:

Install **NexBeta-ABG series monitors** on your water inlet pipe to automatically and continuously monitor drinking water 24/7 for any radioactive contamination. The **NEXBETA-ABG-9TT monitors & treats radionuclide & biological contamination.**

Facilities with multiple water inlets may wish to install multiple **NexBeta-ABG** systems.

Specifically designed to protect populations vulnerable to contaminants, such as in hospitals, schools, and government facilities. Very few cities or water wholesalers monitor water continuously for radiation.

ALTERNATIVE USES:

- **Monitor Liquid-Waste-Stream** from plant or laboratory to maintain regulatory compliance.
- **If water source is river or reservoir** the particulate pre-filter with its own RAD Detector is recommended.



TECHNICAL ASSOCIATES

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303

PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@TECH-ASSOCIATES.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISION OF



USNUCLEARCORP

OTCOB-UCLC

FACILITY DRINKING WATER SAFETY MONITOR

Model Series - NexBeta-ABG SERIES

NexBeta-ABG ~ NexBeta-ABG-9 ~ NexBeta-ABG-9TT

PROTECT VULNERABLE – HOSPITALS – SCHOOLS – GOVERNMENT FACILITIES

PROBLEM:

Drinking water sources are vulnerable to accidental or knowing contamination by individuals, groups, industry, medical labs, terrorists, and from naturally occurring radioactive materials (NORM). As yet very few water districts have real-time radiation monitors in place to protect the water and the public.

SOLUTION:

- For the first time in a **Continuous Real Time** monitor the **NexBeta-ABG series** solves this problem by continuously monitoring water using ultra-sensitive, radiation detectors.
- The information from these detectors is analyzed and displayed in units of picoCuries per liter.
- Monitors drinking water against most radioactive contaminants except H-3, C-14, S-35, Fe-55.

NexBeta-ABG-9 & NexBeta-ABG-9TT:

- The count times are user settable. Calculations are automatically updated every 2 minutes, every hour and every day. Measurements of radiation concentration are logged 24 hr/day, 7 day/week in. The longer update times correspond with greater precision and increased sensitivity.
- Sensitivities in the daily updates meet or exceed the DHS **PAG** (Protective Action Guideline Levels) for drinking water.
- The **NexBeta-ABG-9TT system is a Test & Treat system removing biological contaminations and reducing radioisotopes.**

DESCRIPTION:

Model **NexBeta-ABG Series** monitors are radiation detecting water monitor /controllers for measuring of Alpha, Beta & Gamma emitting radio nuclides. The electronics are microprocessor with LED/LCD display. The system is covered by TA's full one year warranty. On-site service contracts available in many areas.

The Alpha, Beta flow cell & Gamma detector are easily changed via disconnect fittings. All connections are sealed against leaks. The standard water moving system is based on a high precision pump. It has a 10 liter per minute capacity. System can also be operated using city water pressure in which case no pump is required.

A wide range of pump capacities are available to meet users' specific needs. The system detectors and electronics are ruggedly built. It comes complete with all cabling tubing and connectors in place and is ready to operate. 115 Volt 60Hz is standard; 220 Volt 50/60 Hz or battery operations are optional.

Detectors in this system:

- 1. Alpha-Beta Detector:** Consists of a light-tight detector assembly which interfaces with the sample via quick disconnect coax cables and medical grade hoses. The sample is viewed by a matched pair of 5" diameter photo-multiplier tubes.
- 2. Gamma Scintillation detector** has a sensitive 2" diameter crystal.
- 3. BioSensor for the NexBeta-ABG-9TT.**

The Alpha-Beta pulse analysis portion of this system conditions and analyzes the output from the photo-multiplier tubes by pulse height, duration and coincidence; thereby permitting the system to exclude most background and noise counts. Sensitivity is enhanced by the use of stochastic resonance plus high gain, low noise PM tubes and pre-amps.



TECHNICAL ASSOCIATES

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303

PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@TECH-ASSOCIATES.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISION OF



OTCOB-UCLC

FACILITY DRINKING WATER SAFETY MONITOR

Model Series - NexBeta-ABG SERIES


NexBeta-ABG ~ NexBeta-ABG-9 ~ NexBeta-ABG-9TT

PROTECT VULNERABLE –
HOSPITALS – SCHOOLS – GOVERNMENT FACILITIES

FLOW PATH ~~ NexBeta-ABG & NexBeta-ABG-9:

- Water Inlet port
- Pressure Regulator
- Particulate Pre-Filter (with optional additional Gamma Detector)
- Ultra Violet Sterilizer (Optional)
- Mass Flow Meter (Optional)
- Flow chamber with alpha-beta and gamma detectors
- Tested water is clean and returns to the drinking water line.
 - No liquid scintillate or reagents are added
 - No toxic or radioactive waste of any kind.

FLOW PATH

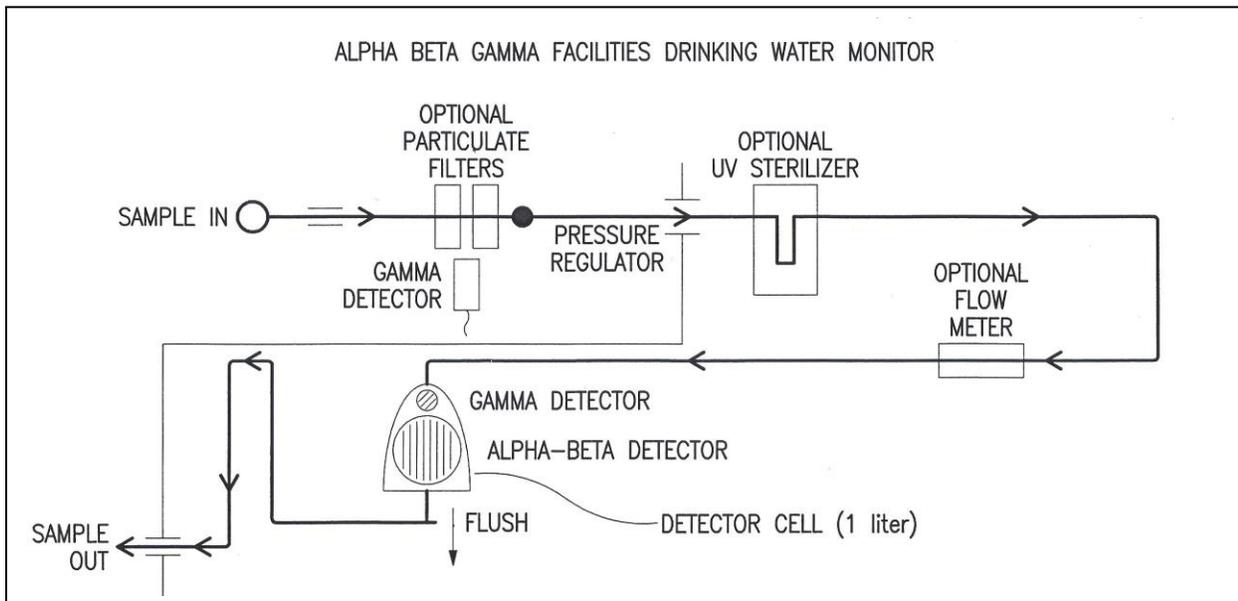

NexBeta-ABG & NexBeta-ABG-9



TECHNICAL ASSOCIATES

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303

PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@TECH-ASSOCIATES.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISION OF



USNUCLEARCORP

OTCOB-UCLC

FACILITY DRINKING WATER SAFETY MONITOR

Model Series - NexBeta-ABG SERIES


NexBeta-ABG ~ NexBeta-ABG-9 ~ NexBeta-ABG-9TT

PROTECT VULNERABLE –
HOSPITALS – SCHOOLS – GOVERNMENT FACILITIES

FLOW PATH ~~ NexBeta-ABG 9TT (Test & Treatment System)

- Water Inlet port
- Optional Particulate Pre-Filter
- Pressure Regulator
- Bio Sensor
- Valve to Direct Clean or Dirty Water
- Ultra Violet Sterilizer for Dirty Water
- Valve to Direct Clean or Dirty Water
- Flow chamber with Alpha Beta & Gamma Detectors
- Valve to Direct Clean or Dirty Water
- Filter & Ion Exchange for Dirty Water
- Mass Flow Meter
- Tested & Treated Water is Clean & Returns to the Water Line.
 - No liquid scintillates or reagents are added
 - No toxic or radioactive waste of any kind.

FLOW PATH

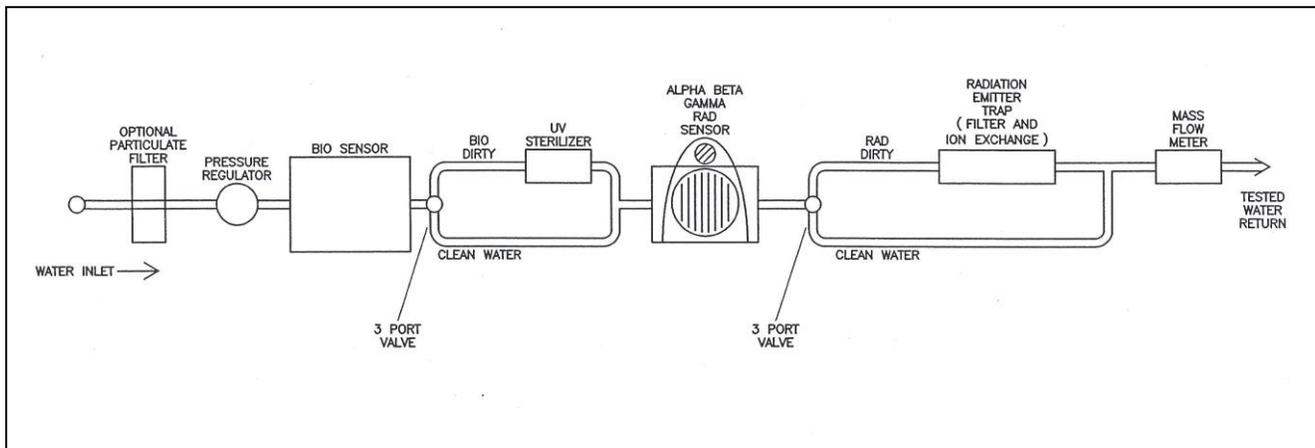

NexBeta-ABG-9TT



Real - Time
Air & Water
Specialists



TECHNICAL ASSOCIATES

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303

PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@TECH-ASSOCIATES.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISION OF



USNUCLEARCORP

OTCOB-UCLC

FACILITY DRINKING WATER SAFETY MONITOR

Model Series - NexBeta-ABG SERIES

NexBeta-ABG ~ NexBeta-ABG-9 ~ NexBeta-ABG-9TT

PROTECT VULNERABLE –
HOSPITALS – SCHOOLS – GOVERNMENT FACILITIES

DATA:-Analysis-Display-Data Stored Flash Drive Archive

NexBeta-ABG-9 & NexBeta-ABG-9TT:

- The concentration and total activity released and MDA levels are continuously calculated and recorded.
- On Board Data Storage
- USB / Ethernet Ports
- Data can be saved to the optional flash drive in spreadsheet format.

SPECIFICATIONS:

- **Alarms:** Each alarm activates a relay. Relay alarms are available to the user.
- **Sample temperature:** measurements are most accurate in range 40° to 85° F. Instrument is still operational up to higher temperatures
- **Optional:** Cooler model Cool-33 for detector & sample is used in case of higher sample or ambient temperatures.

DIMENSIONS, WEIGHT, SHIPPING INFORMATION

NexBeta-ABG Lam-10-D Electronics:

7" W x 10" H - **Weight:** 8 lbs

(Electronics may be positioned separate from detector)

Dimensions NexBeta-ABG Assembly:

10" H x 10" D x 29" W - **Weight:** 37 lbs
(excluding optional shielding)

NexBeta -ABG-9 & NexBeta -ABG-9TT Electronics:

11" W x 11" W x 14" H - **Weight:** 12 lbs

(Wall Mount electronics)

Dimensions NexBeta -ABG-9 or NexBeta -ABG-9TT Assembly:

10" H x 10" D x 29" - **Weight:** 45 lbs
(excluding optional shielding)

NOTE: Optional thin Lead Sheet for shielding can be shipped with or shipped separately. Overseas customers may wish to buy the lead sheet locally.



NexBeta-ABG-9 & NEX-BETA-ABG-9TT
ELECTRONICS



NexBeta-ABG ~ LAM-10-D
ELECTRONICS



Real - Time
Air & Water
Specialists



TECHNICAL ASSOCIATES

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303

PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@TECH-ASSOCIATES.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISION OF



USNUCLEARCORP

OTCOB-UCLC

FACILITY DRINKING WATER SAFETY MONITOR

Model Series - NexBeta-ABG SERIES

NexBeta-ABG ~ NexBeta-ABG-9 ~ NexBeta-ABG-9TT

**PROTECT VULNERABLE –
HOSPITALS – SCHOOLS – GOVERNMENT FACILITIES**

DETECT	PAG LEVEL	LOWER LIMIT of SENSITIVITY	TOP OF RANGE	SENSOR / METHOD USED	TIME	MAINTENANCE for finished water ACTION
Alpha	U-238 3,000 pCi/l			5" dia. Dual PM Tube crushed scintillation bed of crystals	3--6 mo	Replace particulate filter cartridge
30 min 24 hr		25,000 pCi/l 3,000 pCi/l	2 x 10 ⁷ pCi/l			
Beta	K-40 30,000 pCi/l			5" dia. Dual PM Tube 1000 ml chamber	3--6 mo	Replace particulate filter cartridge
30 min 24 hr		30,000 pCi/l 10,000 pCi/l	2 x 10 ⁷ pCi/l	1100 cm ² Beta Scintillator		
Gamma	Co-58 30,000 pCi/l			Standard: Single Channel Energy Analyzer Optional: Multi-Channel Analyzer	3--6 mo	Simple MCA check
30 min 24 hr		20,000 pCi/l 5,000 pCi/l	2 x 10 ⁷ pCi/l	75x75mm NaI(Tl) Crystal		
OPTIONS:		LOWER LIMIT	TOP OF RANGE			
DETECT						
Tritium		20,000 pCi/l	1 x 10 ⁶ pCi/l	Crushed scintillation bed of crystals		Replace ion exchange cartridge
Radon		100 pCi/liter	2000 pCi/liter		1-3 mo	Clean or replace vapor trap
PRE-CONDITION						
Expel Radon						Clean or replace vapor trap



Real - Time
Air & Water
Specialists



TECHNICAL ASSOCIATES

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303

PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@TECH-ASSOCIATES.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISION OF



USNUCLEARCORP

OTCOB-UCLC

FACILITY DRINKING WATER SAFETY MONITOR

Model Series - NexBeta-ABG SERIES

NexBeta-ABG ~ NexBeta-ABG-9 ~ NexBeta-ABG-9TT

**PROTECT VULNERABLE –
HOSPITALS – SCHOOLS – GOVERNMENT FACILITIES**

FEATURES

FEATURES	NexBeta-ABG	NexBeta-ABG-9 All-in-One	NexBeta-ABG-9TT All-in-One
Read-Out Units (Typical)	Bq/m ³ pCi/l User Selectable	Bq/m ³ pCi/l User Selectable	BIO – ppm RAD - Bq/m ³ or pCi/l User Selectable
Measures	Waterborne Concentration	Waterborne Concentration	Waterborne Concentration
Electronics	LAM-10-D Ratemeter	Calculations by embedded processor	Calculations by embedded processor
Software Functions Data Logger	N/A	On board computer	On board computer
Assisted Calibration	N/A	Included	Included
Report Generator	N/A	Included	Included
Advanced Data Analysis (for low radiation levels and long measurements)	N/A	Included	Included
Available Options		Optional Overhoff Networking Overview (ORO)	Optional Overhoff Networking Overview (ORO)
Portable Version	NexBeta -ABG-P	NexBeta -ABG-9P	
Installed Version	NexBeta -ABG	NexBeta -ABG-9	Inline/Installed only NexBeta ABG-9TT



TECHNICAL ASSOCIATES

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303

PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@TECH-ASSOCIATES.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISION OF



OTCOB-UCLC